9. Assemble and Disassemble

1. ASS'Y-COVER TOP

1) Remove two screws fixing the top-cover on back side.
2) Push the top-cover back about 15mm and pull it up.
3) It's possible to exchange and service Assy-Panel (PCB), the pressure-sensor, the noise-filter, the water valve and trans(option).

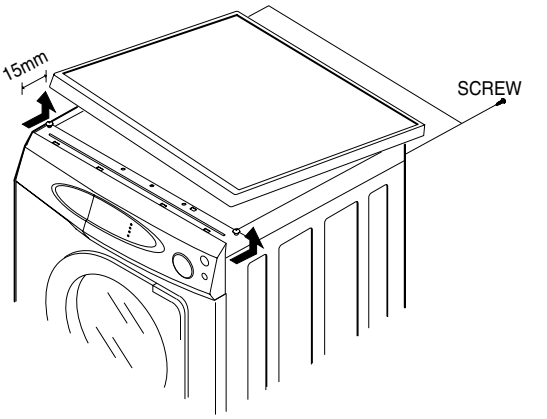

2. FRAME FRONT

1) Remove the top-cover and the ass'y drawer.
2) Remove two screws fixing the control-panel on front side and the screw on right side.
3) Remove the cover-front(L) by using the (-)driver.
4) Pull the lever and open the ass'y-door.
5) Part the diaphragm and the wire diaphragm away from the frame-front.
6) Remove the eight screws fixing the frame-front.
7) It's possible to exchange and service the heater, the pump, the shock-absorber and the door lock s/w.

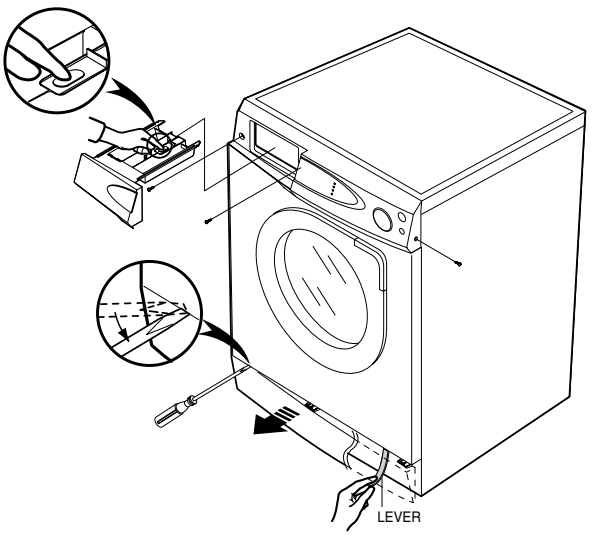

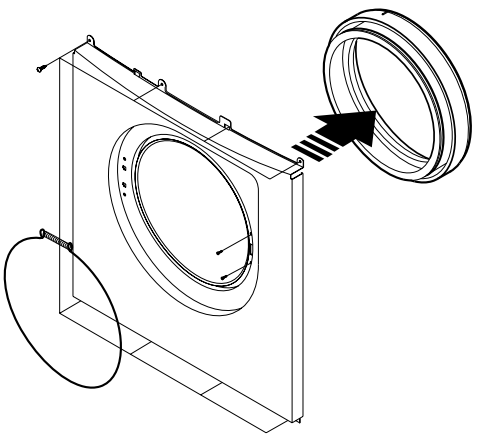

9. Assemble and Disassemble

3. BELT

1) Remove the top-cover.
2) Disassemble and assemble the belt.
3) Check the belt is located at center of the motor-pulley.
<When assemble the belt>
Hook the belt on the motor pulley 1) and place it around the pulley 2).

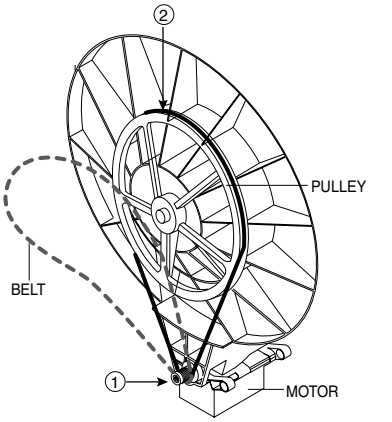

4. MOTOR

1) Lay down the washer on left side.
2) Remove the wire housing from the motor.
3) Remove the bolt fixing the motor with the box drive on back side.
4) Remove the motor.

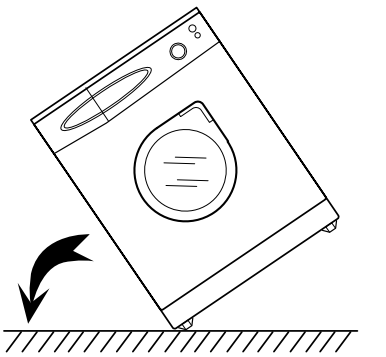

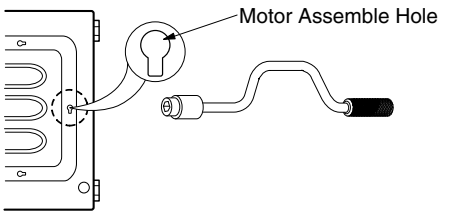

5. How to Assemble the RELAY Housing.

<CAUTION>
Insert the Relay Housing to the Relays on the opposite direation each other.

[Relay Housing Color]

Model	A	B
All Model	WHITE	BLUE

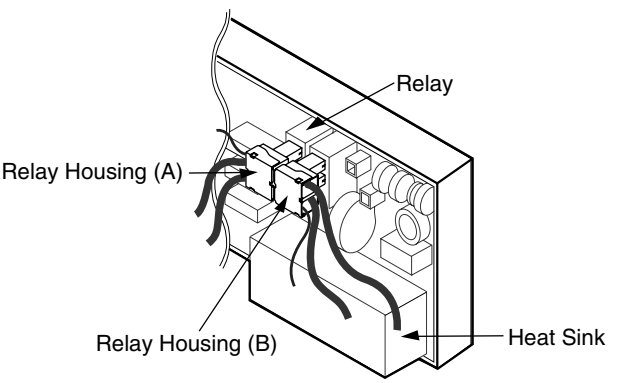

10. Tools for Disassembly and Assembly
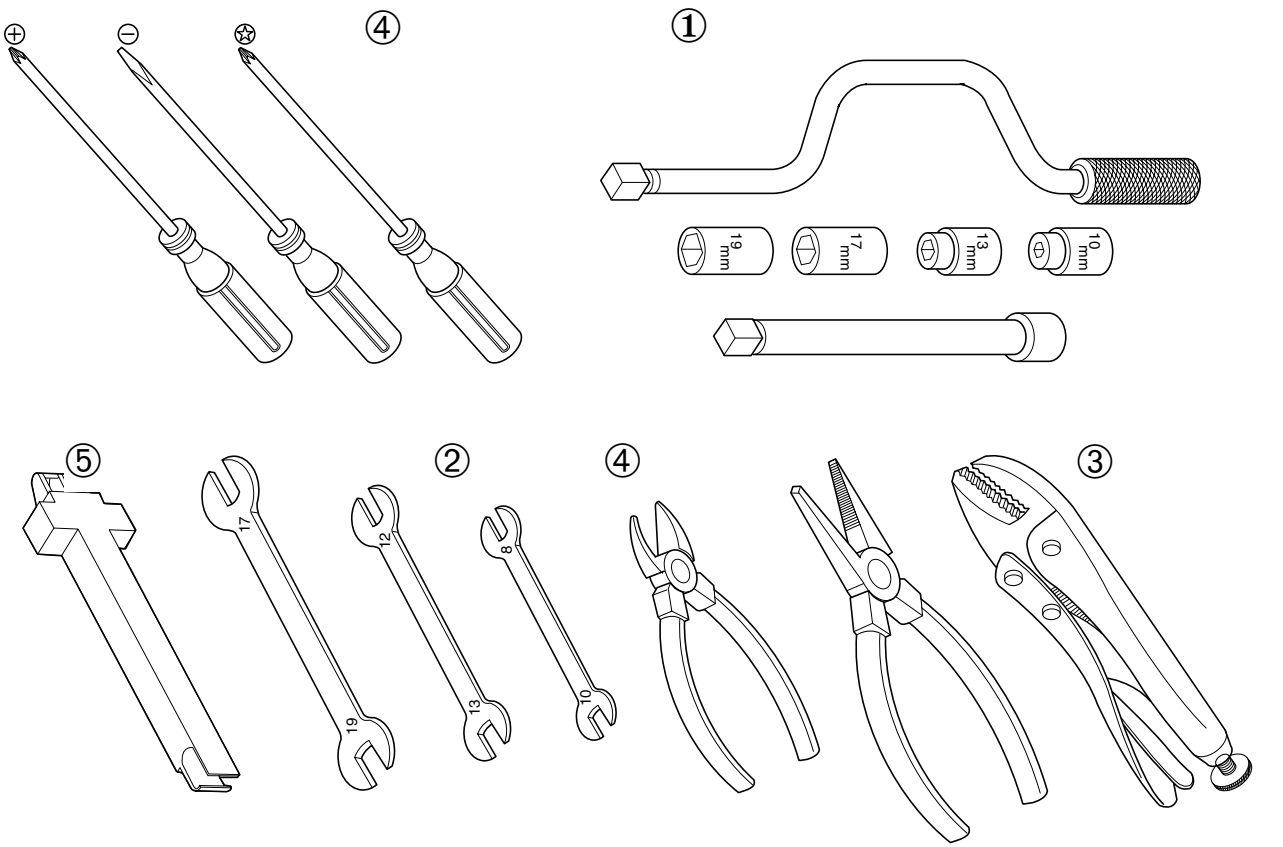
NO.	TOOL		
①	Box driver	10mm 13mm 17mm 19mm	Heater (1) Motor (1), Balance (5) 2 holes of each left and right of the shock absorber 1 Pulley hole
②	Double-ended spanner	10, 13 17, 19mm	Replaceable for the box driver. Since the bolt runs idle when the box driver is used, use the box driver 17mm.
③	Vice pliers		Tool to protect the idle and abrasion of the bolt for the box driver.
④	Other(Driver, Nipper, Long nose)		General tools for the after service.
⑤	JIG for the Tub		1 (Disassemble and Assemble)